


 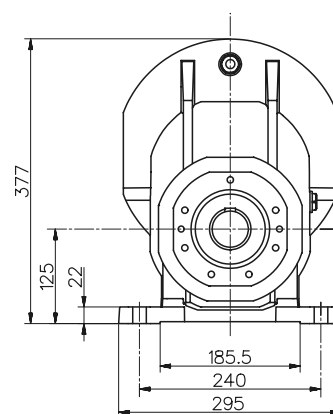


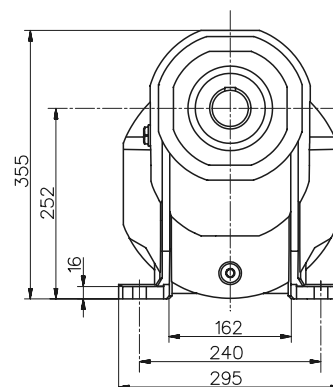


Per le dimensioni relative alla zona attacco motore (Pm, Dm, bm, tm) fare riferimento alla tabella di pag. 142.
For the dimensions concerning the motor connection area (Pm, Dm, bm, tm) please refer to the table shown at page 142.
Zu den Abmessungen des Motoranschlußflansches (Pm, Dm, bm, tm) siehe Tabelle auf Seite 142.
Pour les dimensions concernant la zone de montage du moteur (Pm, Dm, bm, tm) lire SVP le tableau à la page 142.
Para las magnitudes correspondientes a la zona del motor (Pm, Dm, bm, tm) consulte la tabla de la página 142.

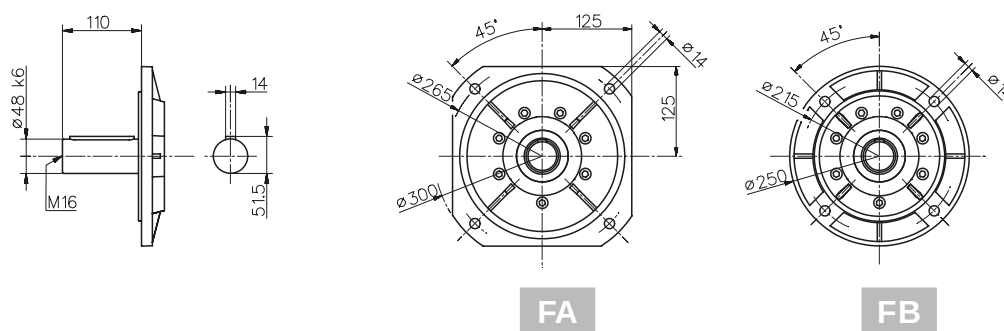





102/..3


Dimensioni / Dimensions / Abmessungen / Encombresments / Dimensiones

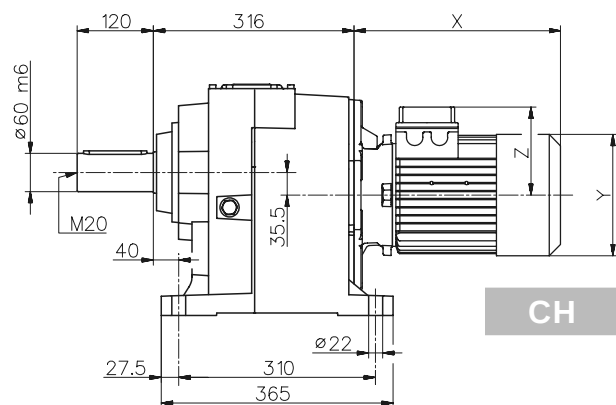


CH

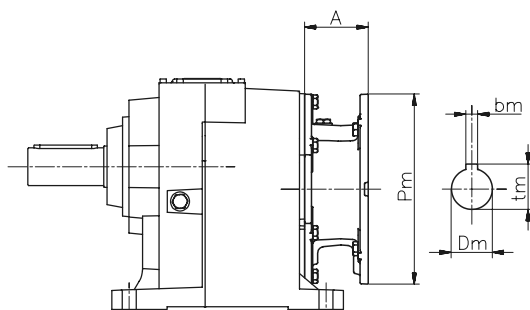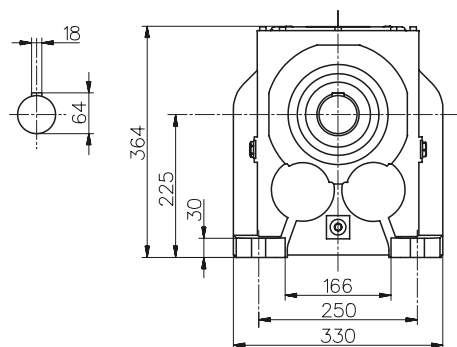


H

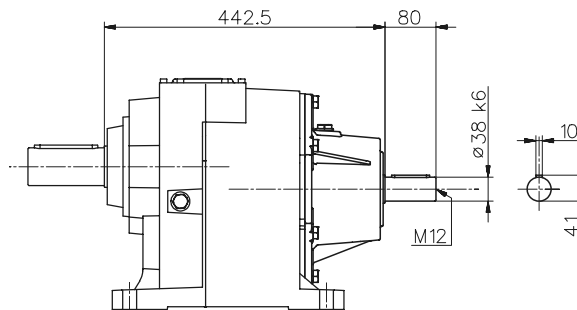

IH

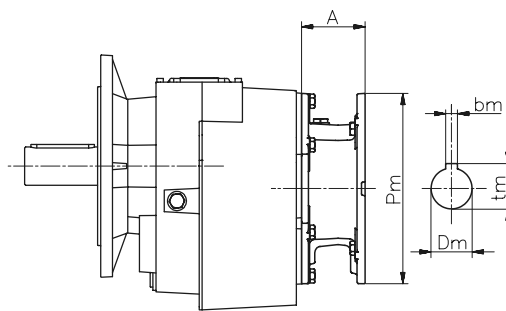

H...F FB - FC

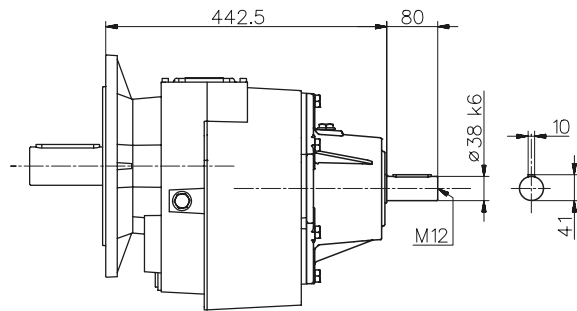

IH...F FB - FC

100	PAM	Motore normale / Standard motor / Normaler Motor / Moteur normal / Motor normal			Motore autofrenante / Brake motor / Bremsmotor / Moteur frein / Motor-freno		
	A	X	Y	Z	X	Y	Z
090s	61	268	173	130	346	173	130
090l	61	292	173	130	370	173	130
100	76	326	191	139	408	191	139
112	76	349	211	150	445	211	150
132s	101	396	249	194	485	249	194
132m	101	434	249	194	537	249	194
160	148	-	-	-	-	-	-
180	148	-	-	-	-	-	-






Per le dimensioni relative alla zona attacco motore (Pm, Dm, bm, tm) fare riferimento alla tabella di pag. 142.


 
For the dimensions concerning the motor connection area (Pm, Dm, bm, tm) please refer to the table shown at page 142.

Zu den Abmessungen des Motoranschlußflansches (Pm, Dm, bm, tm) siehe Tabelle auf Seite 142.



Pour les dimensions concernant la zone de montage du moteur (Pm, Dm, bm, tm) lire SVP le tableau à la page 142.

Para las magnitudes correspondientes a la zona del motor (Pm, Dm, bm, tm) consulte la tabla de la página 142.

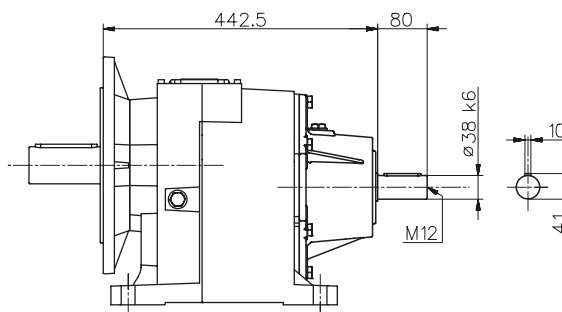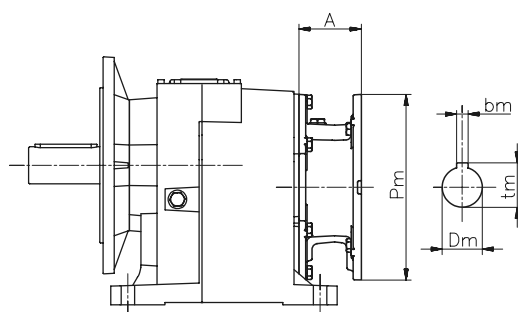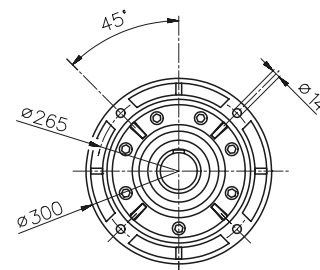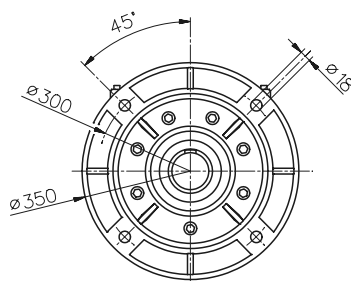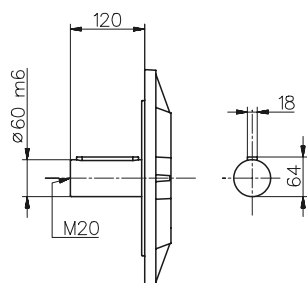


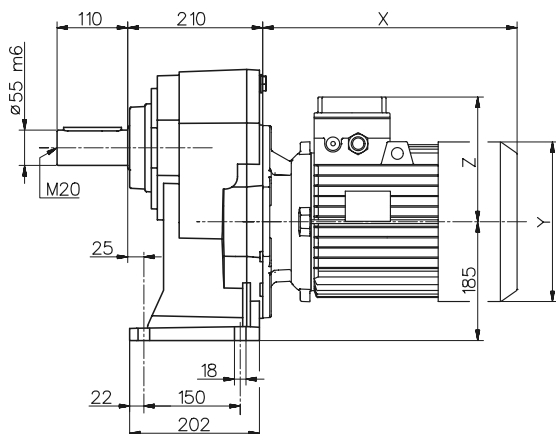

CH




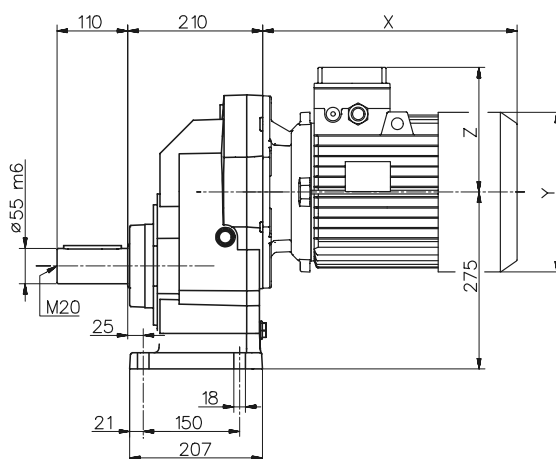
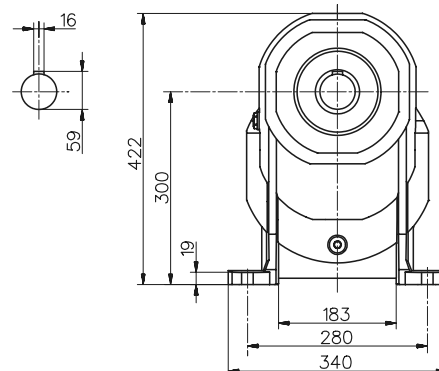



CH...M

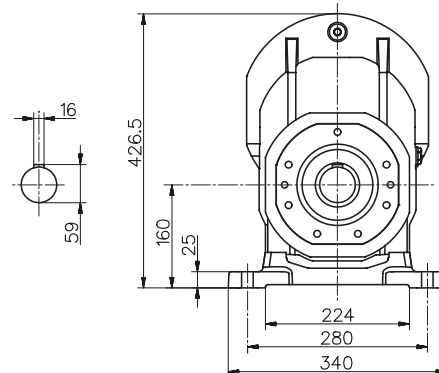

125	PAM	Motore normale / Standard motor / Normaler Motor / Moteur normal / Motor normal			Motore autofrenante / Brake motor / Bremsmotor / Moteur frein / Motor-freno		
	A	X	Y	Z	X	Y	Z
132s	101	396	249	194	485	249	194
132m	101	434	249	194	537	249	194
160	148	-	-	-	-	-	-
180	148	-	-	-	-	-	-
200	185	-	-	-	-	-	-

 
Per le dimensioni relative alla zona attacco motore (Pm, Dm, bm, tm) fare riferimento alla tabella di pag. 142.
 For the dimensions concerning the motor connection area (Pm, Dm, bm, tm) please refer to the table shown at page 142.
 Zu den Abmessungen des Motoranschlußflansches (Pm, Dm, bm, tm) siehe Tabelle auf Seite 142.
 Pour les dimensions concernant la zone de montage du moteur (Pm, Dm, bm, tm) lire SVP le tableau à la page 142.
 Para las magnitudes correspondientes a la zona del motor (Pm, Dm, bm, tm) consulte la tabla de la página 142.

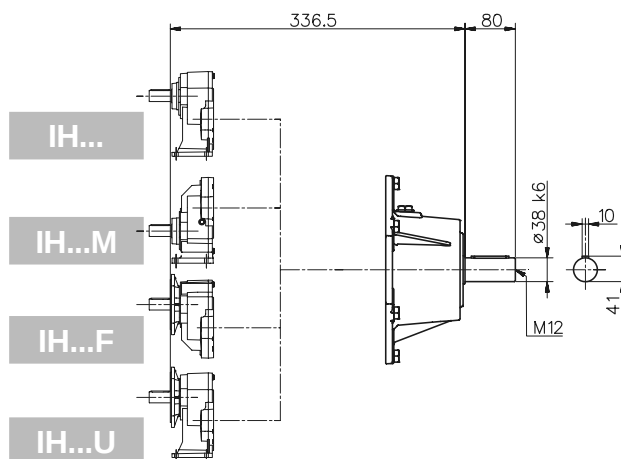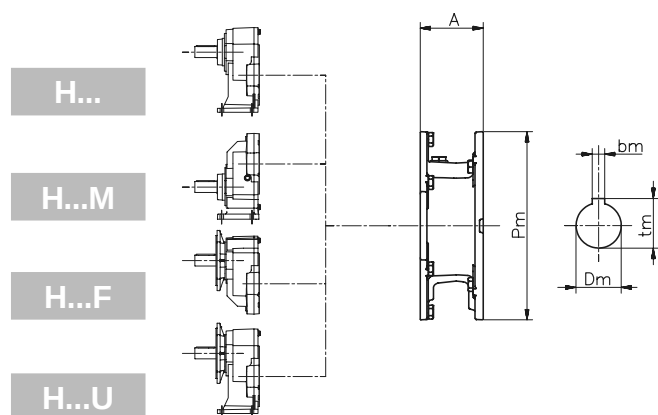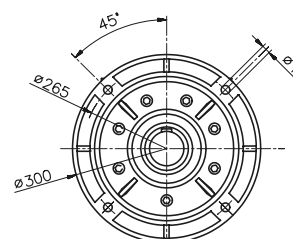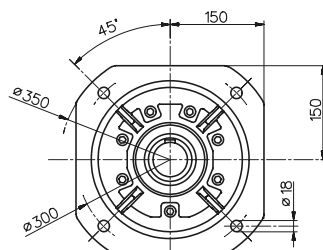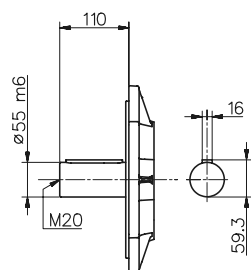





122/..3


Dimensioni / Dimensions / Abmessungen / Encombresments / Dimensiones

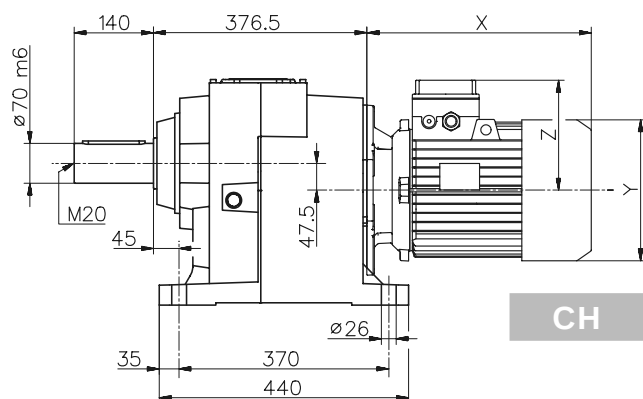


CH

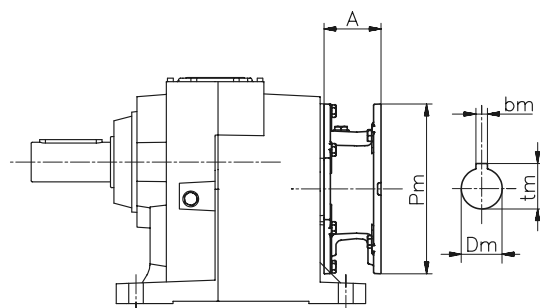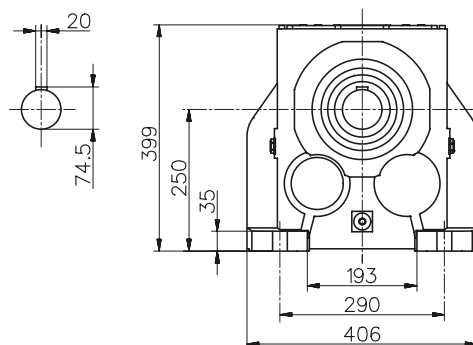


H

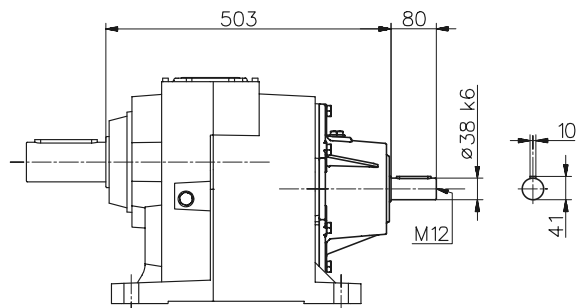

IH

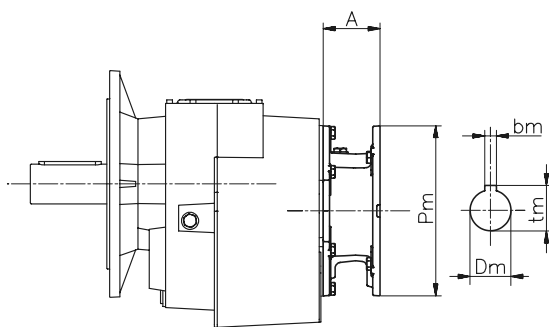

H...F FB

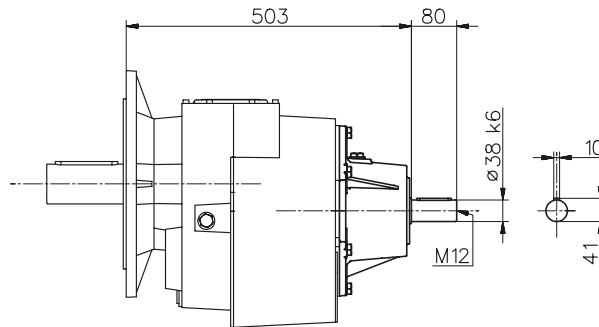

IH...F FB

125	PAM	Motore normale / Standard motor / Normaler Motor / Moteur normal / Motor normal			Motore autofrenante / Brake motor / Bremsmotor / Moteur frein / Motor-freno		
	A	X	Y	Z	X	Y	Z
100	76	326	191	139	408	191	139
112	76	349	211	150	445	211	150
132s	101	396	249	194	485	249	194
132m	101	434	249	194	537	249	194
160	148	-	-	-	-	-	-
180	148	-	-	-	-	-	-
200	185	-	-	-	-	-	-

Per le dimensioni relative alla zona attacco motore (Pm, Dm, bm, tm) fare riferimento alla tabella di pag. 142.

 
For the dimensions concerning the motor connection area (Pm, Dm, bm, tm) please refer to the table shown at page 142.

Zu den Abmessungen des Motoranschlußflansches (Pm, Dm, bm, tm) siehe Tabelle auf Seite 142.

Pour les dimensions concernant la zone de montage du moteur (Pm, Dm, bm, tm) lire SVP le tableau à la page 142.


Para las magnitudes correspondientes a la zona del motor (Pm, Dm, bm, tm) consulte la tabla de la página 142.







142/..3


Dimensioni / Dimensions / Abmessungen / Encombresments / Dimensiones

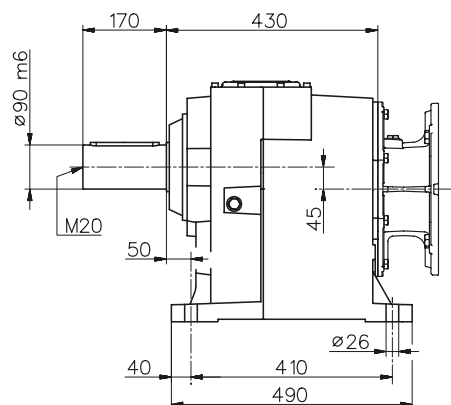


H

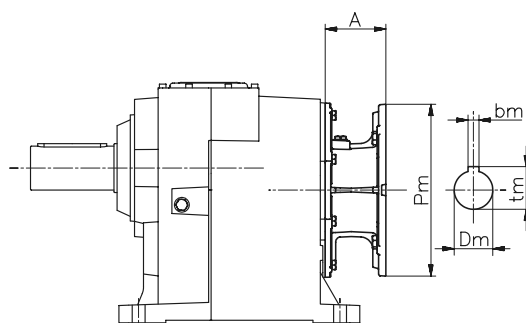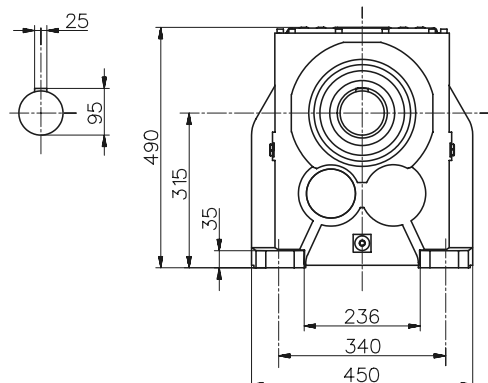


H

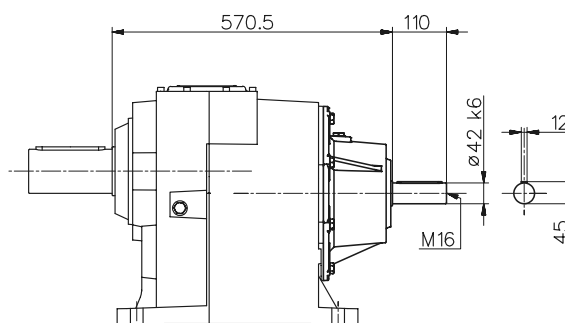

IH

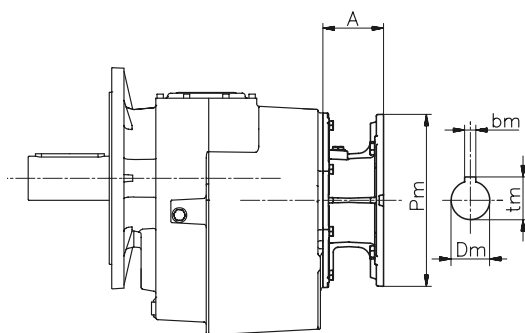

H...F FB - FC

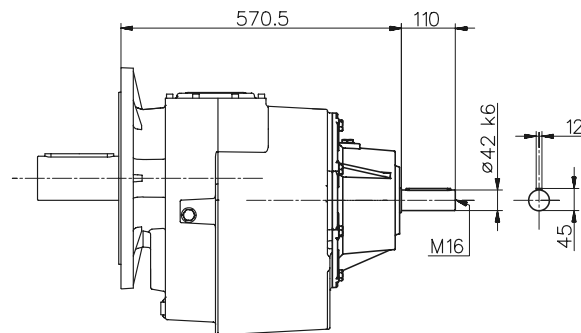

IH...F FB - FC

140	PAM	Motore normale / Standard motor / Normaler Motor / Moteur normal / Motor normal			Motore autofrenante / Brake motor / Bremsmotor / Moteur frein / Motor-freno		
	A	X	Y	Z	X	Y	Z
132s	76	-	-	-	-	-	-
132m	76	-	-	-	-	-	-
160	124	-	-	-	-	-	-
180	124	-	-	-	-	-	-
200	161	-	-	-	-	-	-
225	161	-	-	-	-	-	-






Per le dimensioni relative alla zona attacco motore (Pm, Dm, bm, tm) fare riferimento alla tabella di pag. 142.

For the dimensions concerning the motor connection area (Pm, Dm, bm, tm) please refer to the table shown at page 142.


Zu den Abmessungen des Motoranschlußflansches (Pm, Dm, bm, tm) siehe Tabelle auf Seite 142.

Pour les dimensions concernant la zone de montage du moteur (Pm, Dm, bm, tm) lire SVP le tableau à la page 142.


Para las magnitudes correspondientes a la zona del motor (Pm, Dm, bm, tm) consulte la tabla de la página 142.

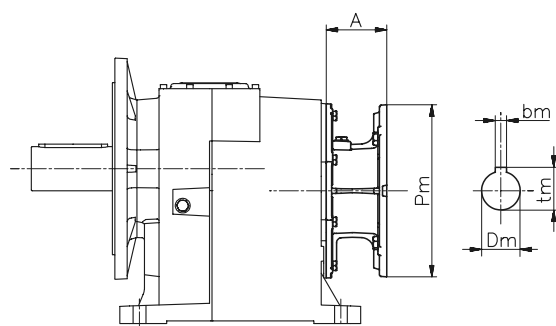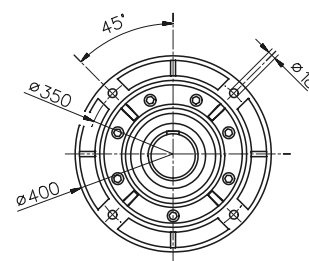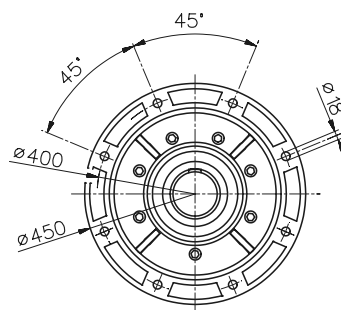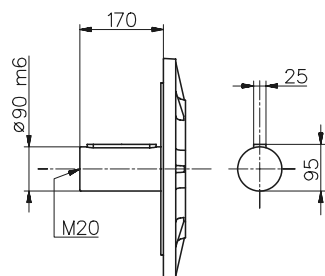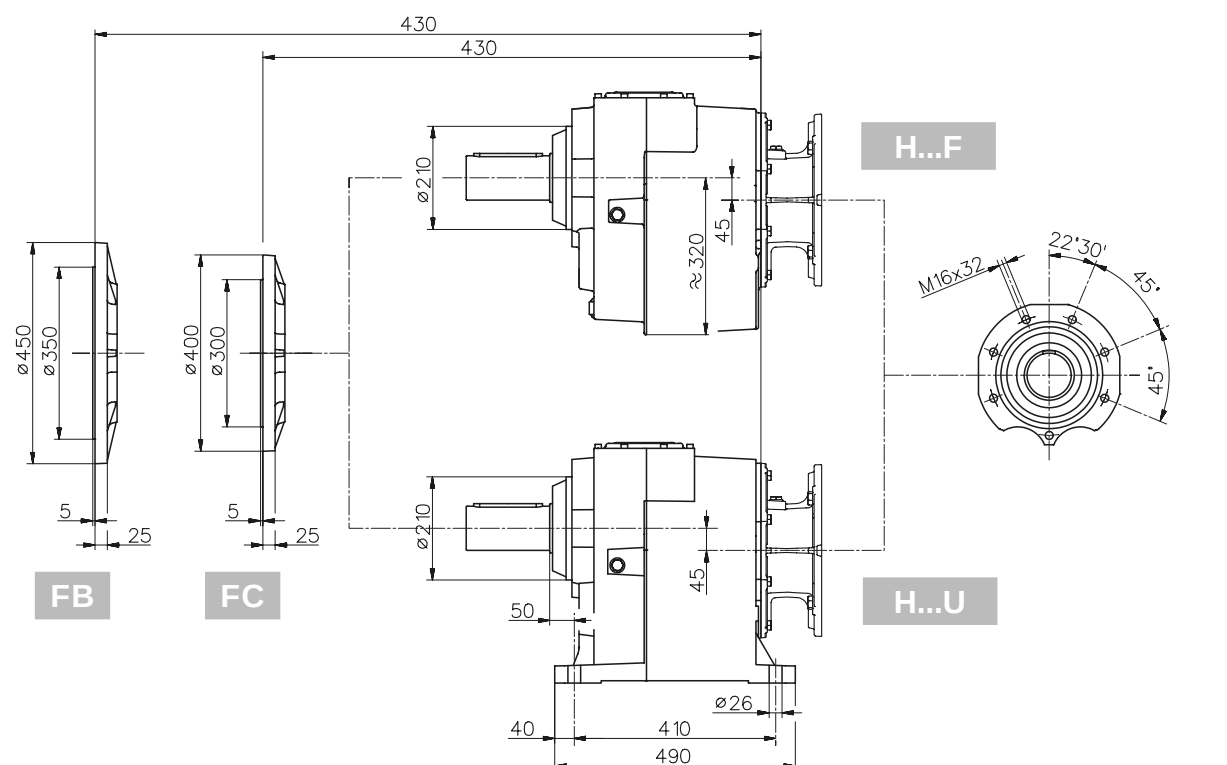


H...U FB - FC

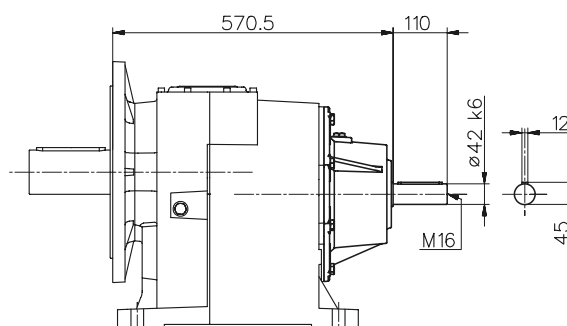

IH...U FB - FC

 


PAM B5 - Dimensioni / Dimensions / Abmessungen / Encombremets / Dimensiones

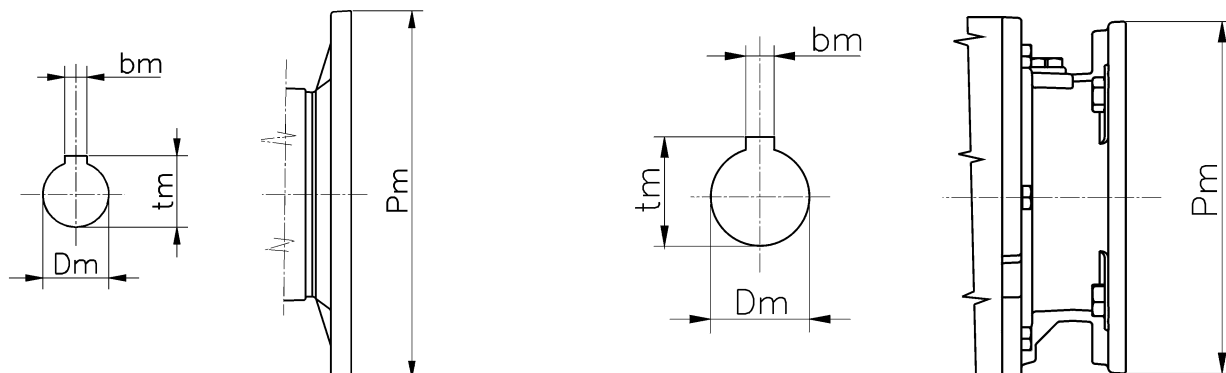

B5	IEC										
	063	071	080	090	100	112	132	160	180	200	225
Pm	140	160	200	200	250	250	300	350	350	400	450
Dm	11	14	19	24	28	28	38	42	48	55	60
bm	4	5	6	8	8	8	10	12	14	16	18
tm	12,8	16,3	21,8	27,3	31,3	31,3	41,3	45,3	51,8	59,3	64,4

PAM B14 - Dimensioni / Dimensions / Abmessungen / Encombremets / Dimensiones

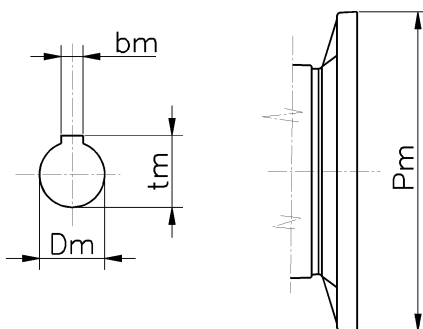

B14	IEC						
	056	063	071	080	090	100	112
Pm	80	90	105	120	140	160	160
Dm	9	11	14	19	24	28	28
bm	3	4	5	6	8	8	8
tm	10,4	12,8	16,3	21,8	27,3	31,3	31,3

143

